ARAT Telephone mount

Type: Peugeot 307, 307 sw, 307 break
Model, 2001 onwards

Part No: 1047.2

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

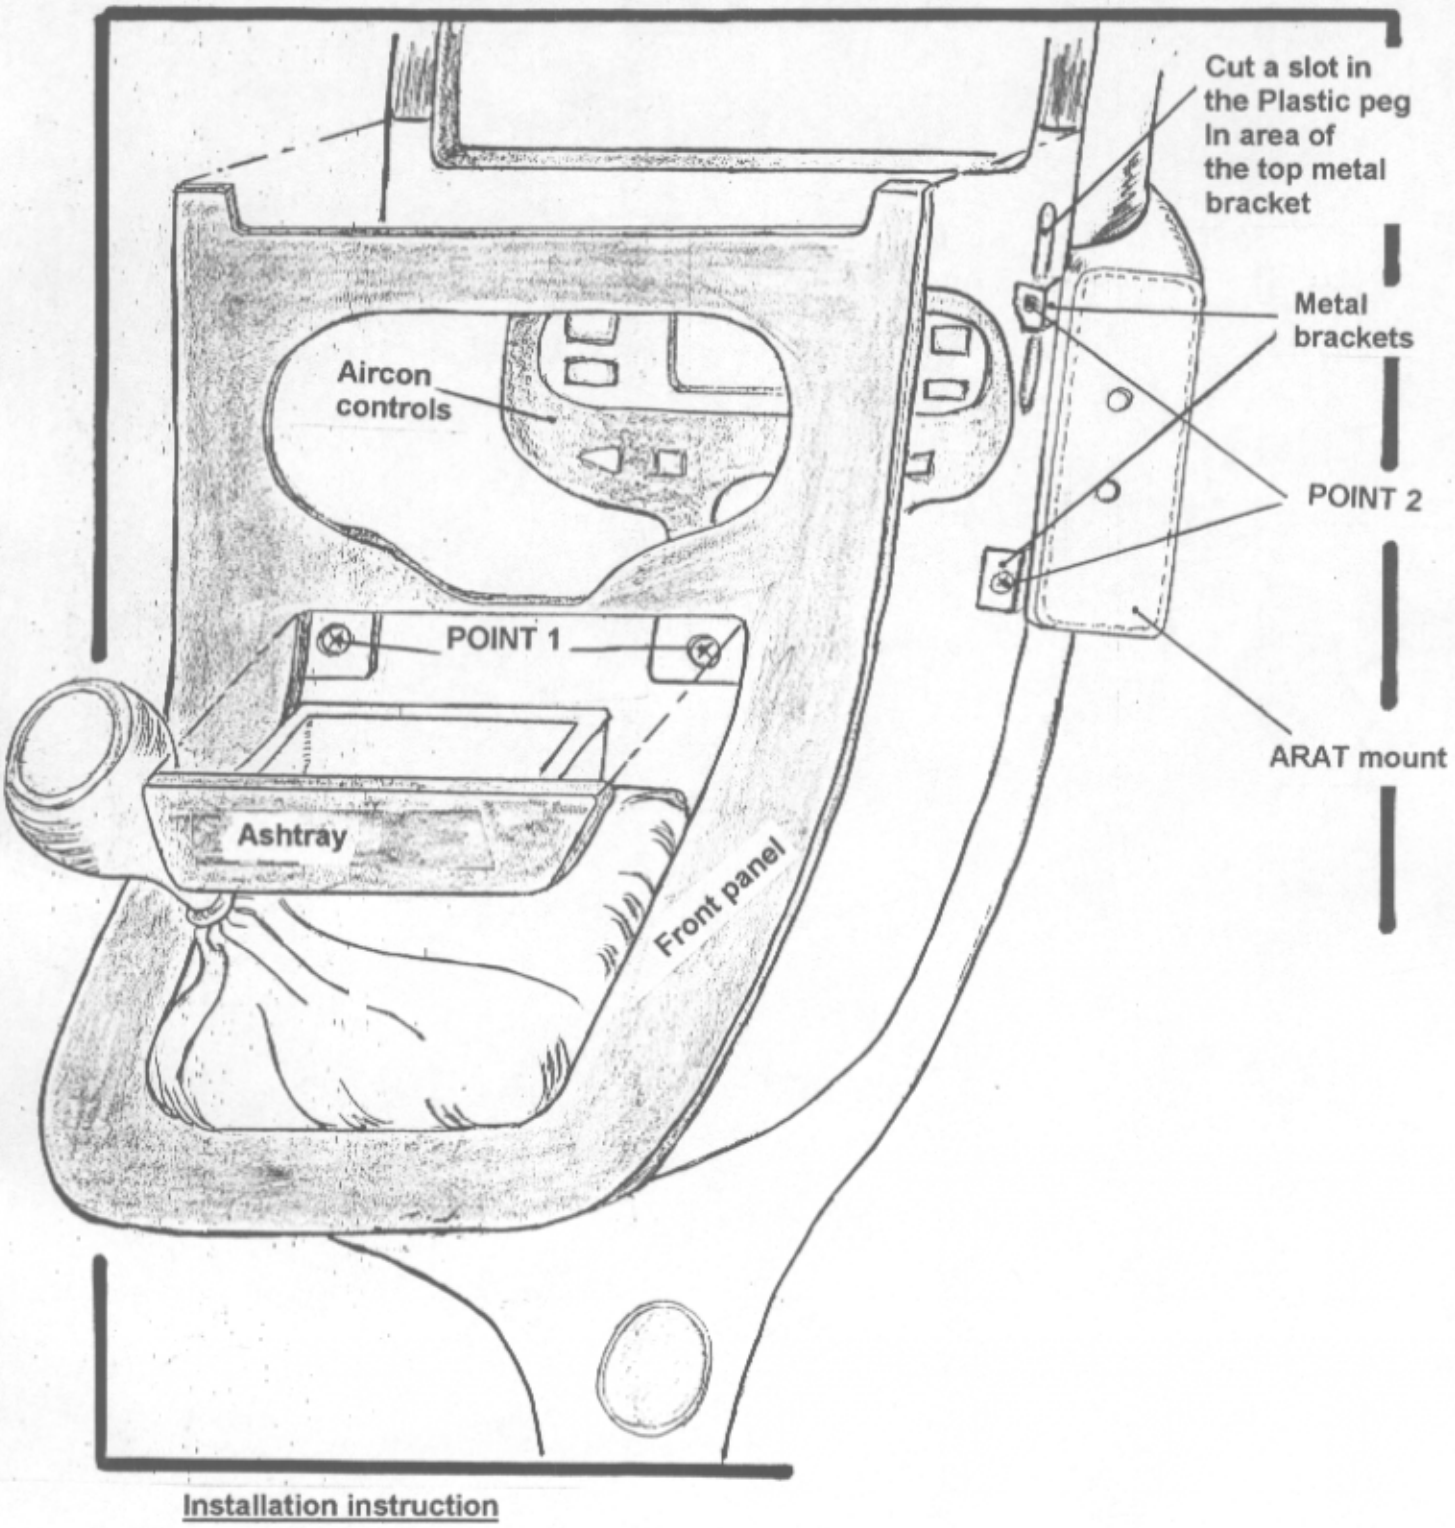


Installation instruction

1. Remove the ashtray from its housing
2. Remove the screws at POINT 1, and pull the front panel off its spring locating clips, and pull it up over the gear shift lever
3. Remove the screw at POINT2, Place the ARAT mount to the contours of the dashboard, (cut a slot in the plastic peg in the area of the top metal bracket)
4. Secure the mount through the metal brackets with the previously removed screws at POINT 2
5. Replace the front panel and ashtray